

# VISTA-40 USER MANUAL SUPPLEMENT

## Using A Fixed-Word Keypad To Add/Delete Security Codes

The User Manual provided with the system explains how to add and delete user security codes using an alpha style keypad. This supplement explains how to add and delete a security code using a fixed-word style keypad if the **system is set up as a single partition system only**.

### To Add a User

1. Enter Installer or Master or Manager code and press the 

CODE
8

 key.
2. Enter the new user's 2-digit User Number
3. Enter 4-digit security code for that user. The following prompts appear:
  - "Ed" (Edit Mode) appears briefly, then
  - "Ad" (Add User) Enter 1 to add a new user code. Entering 0 will change the existing user's code to the code entered in step 3.
  - "EA" (Authority Level) Enter the authority level, 1-6, for this user within this partition.

1=master	3=operator A	5=operator C
2=manager	4=operator B	6=duress code
  - "OC" (Open/Close) This prompt appears only if the Installer code was used to start this procedure. Press 1 if open/close reporting is desired for this user. Press 0 if not desired. For users being added by the master or manager code, open/close reporting is automatically assigned if the master/manager was assigned this reporting by the installer.
  - "00" (RF Button) This prompt will appear if a 5800 series button transmitter has been supplied and has not yet been assigned to a user. Press 1 if a button transmitter will be assigned to this user. Otherwise press 0.
  - "00" (RF Zone Number) If assigning a button transmitter, this prompt will appear. Enter the button's zone number (see your installer for zone number).
  - "FC" (Out of Range) This appears if the user number entered is an invalid user number.

### To Delete a User

1. Enter Installer or Master or Manager code and press the 

CODE
8

 key + User Number to be deleted.
2. Enter Master or Manager code first entered.
  - "dE" (Delete User) The system will recognize that the User number is already in use and will prompt to confirm that it should be deleted. Press 0 (NO) or 1 (YES).
  - "dC" (Code Deleted) If yes, that user's code will be removed from all partitions to which it was assigned, and all authorization levels and other information about that user will be deleted. Note that a user can only be deleted from the partition in which it was first assigned, and can only be deleted by a user with a higher authority level. A User's security code cannot be deleted by oneself.

### Event Log Note

Please note that the Vista-40 Event Log now holds up to 100 events.



ALARM DEVICE MANUFACTURING CORPORATION  
A DIVISION OF PITTMAY CORPORATION  
165 Eileen Way, Syosset, New York 11791  
Copyright © 1995 PITTMAY CORPORATION